


IGN-4VW Wasted Spark to MS2 V3.57 with Relay Board

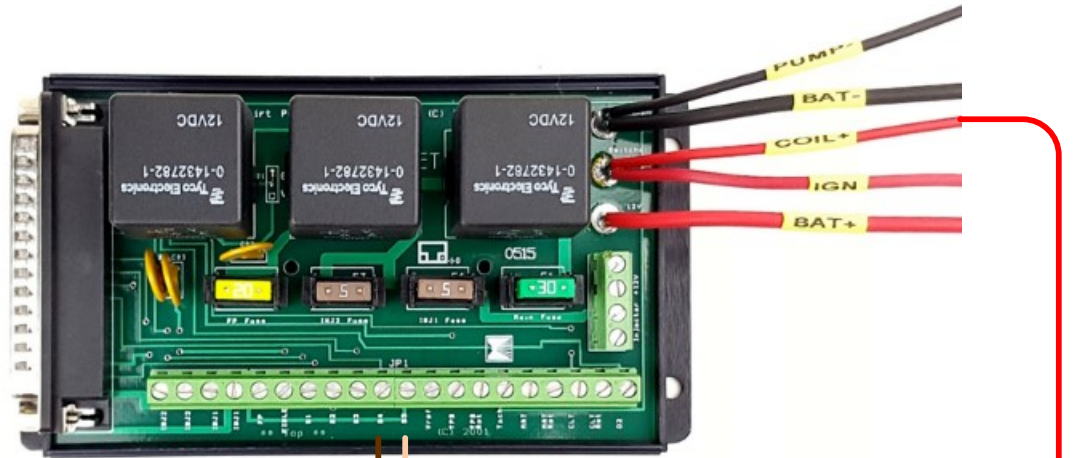

IGN-4VW IGNITION COIL



Engine Ground

Notes:

Resistor spark plugs are required to prevent ECU resets.

Disregard numbers on coil pack and refer to above diagram. The coil was originally designed for an inline application with different firing order.

TITLE		REVISIONS	
IGN-4VW Wasted Spark to MS2 V3.57		NO.	DESCRIPTION
		B	11/19 Moved S Triggers
DATE ORIGINAL	SCALE		
10/29/2019	NTS		
LATEST REVISION	JOB NO.	CHECKED	DRAWN
Rev. B			MV

