


LC-2 Wiring to Relay Board

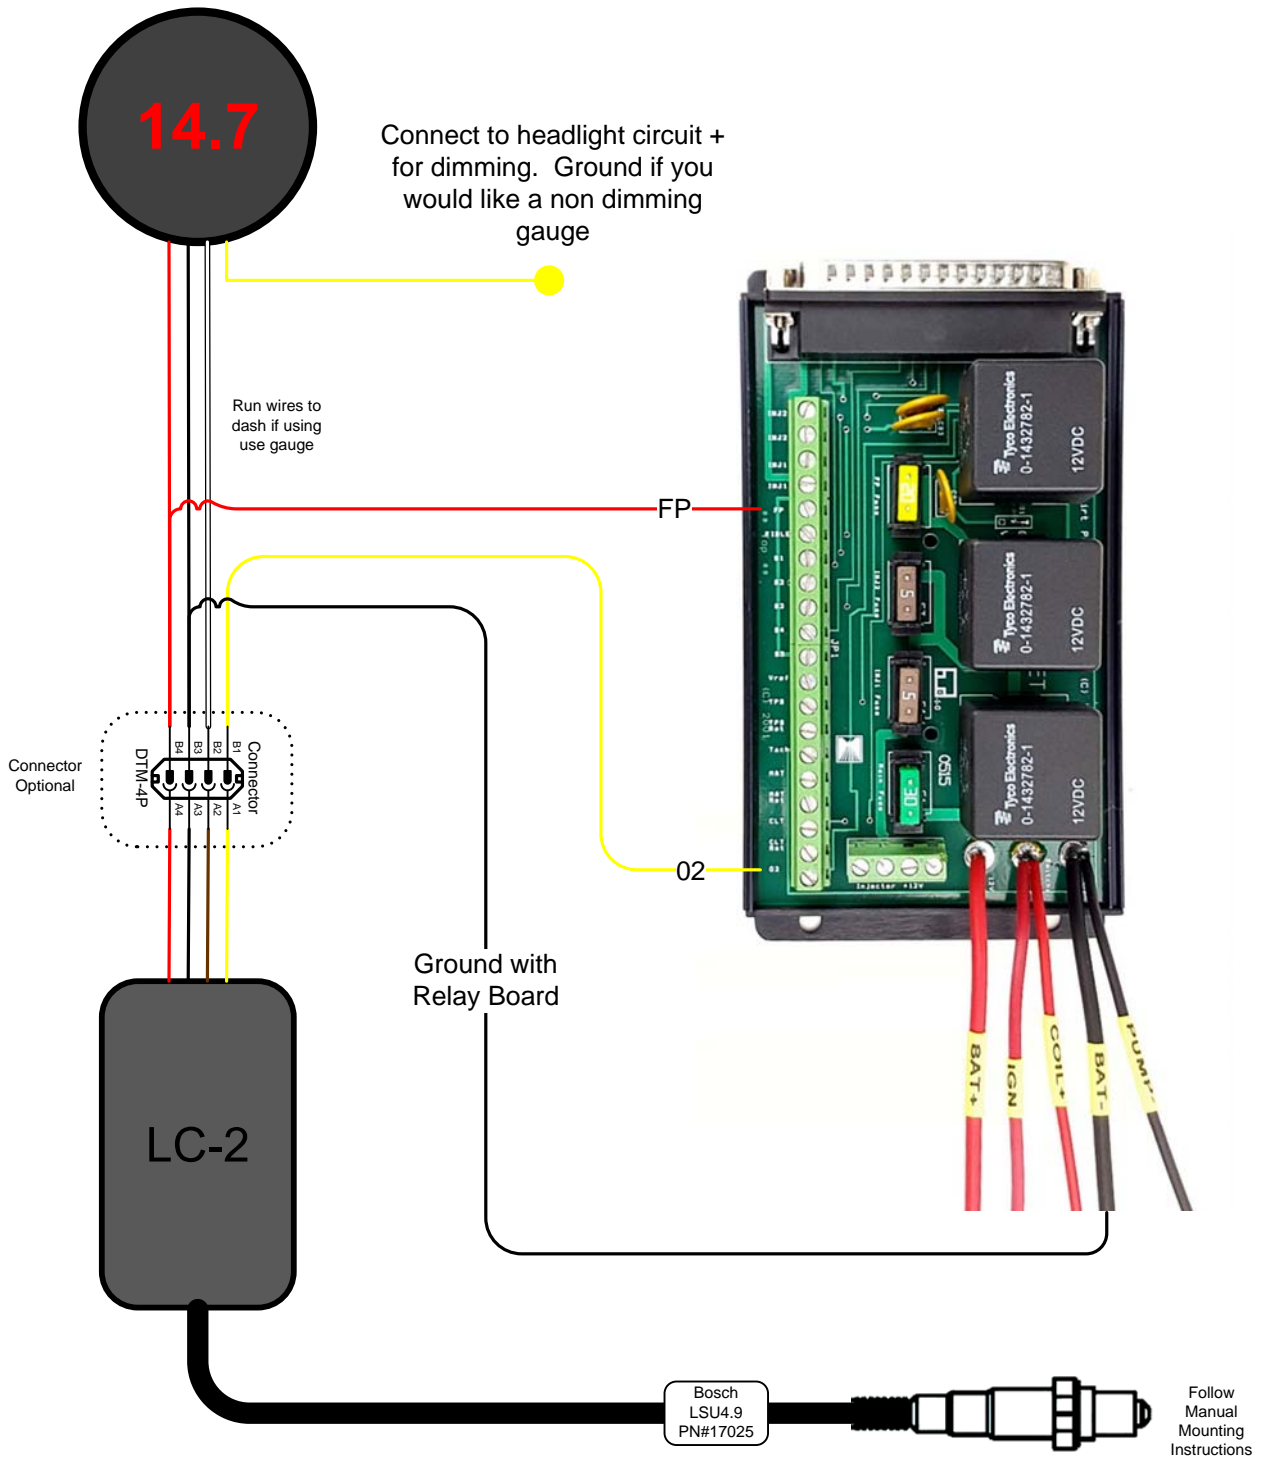

Notes:
The LC2 is powered by the fuel pump to prolong oxygen sensor life. If connected to ignition the sensor will remain heated while the car is not running and cause premature sensor failure.

TITLE		REVISIONS	
LC2 Wiring to Relay Board and Gauge		NO.	DATE DESCRIPTION
		C	10/19 Added Notes
DATE ORIGINAL	SCALE		
9/20/2019	NTS		
LATEST REVISION	JOB NO.	CHECKED	DRAWN
Rev. C			MV

DS
THE DUB SHOP