


VR Crank Sensor Input to Relay Board

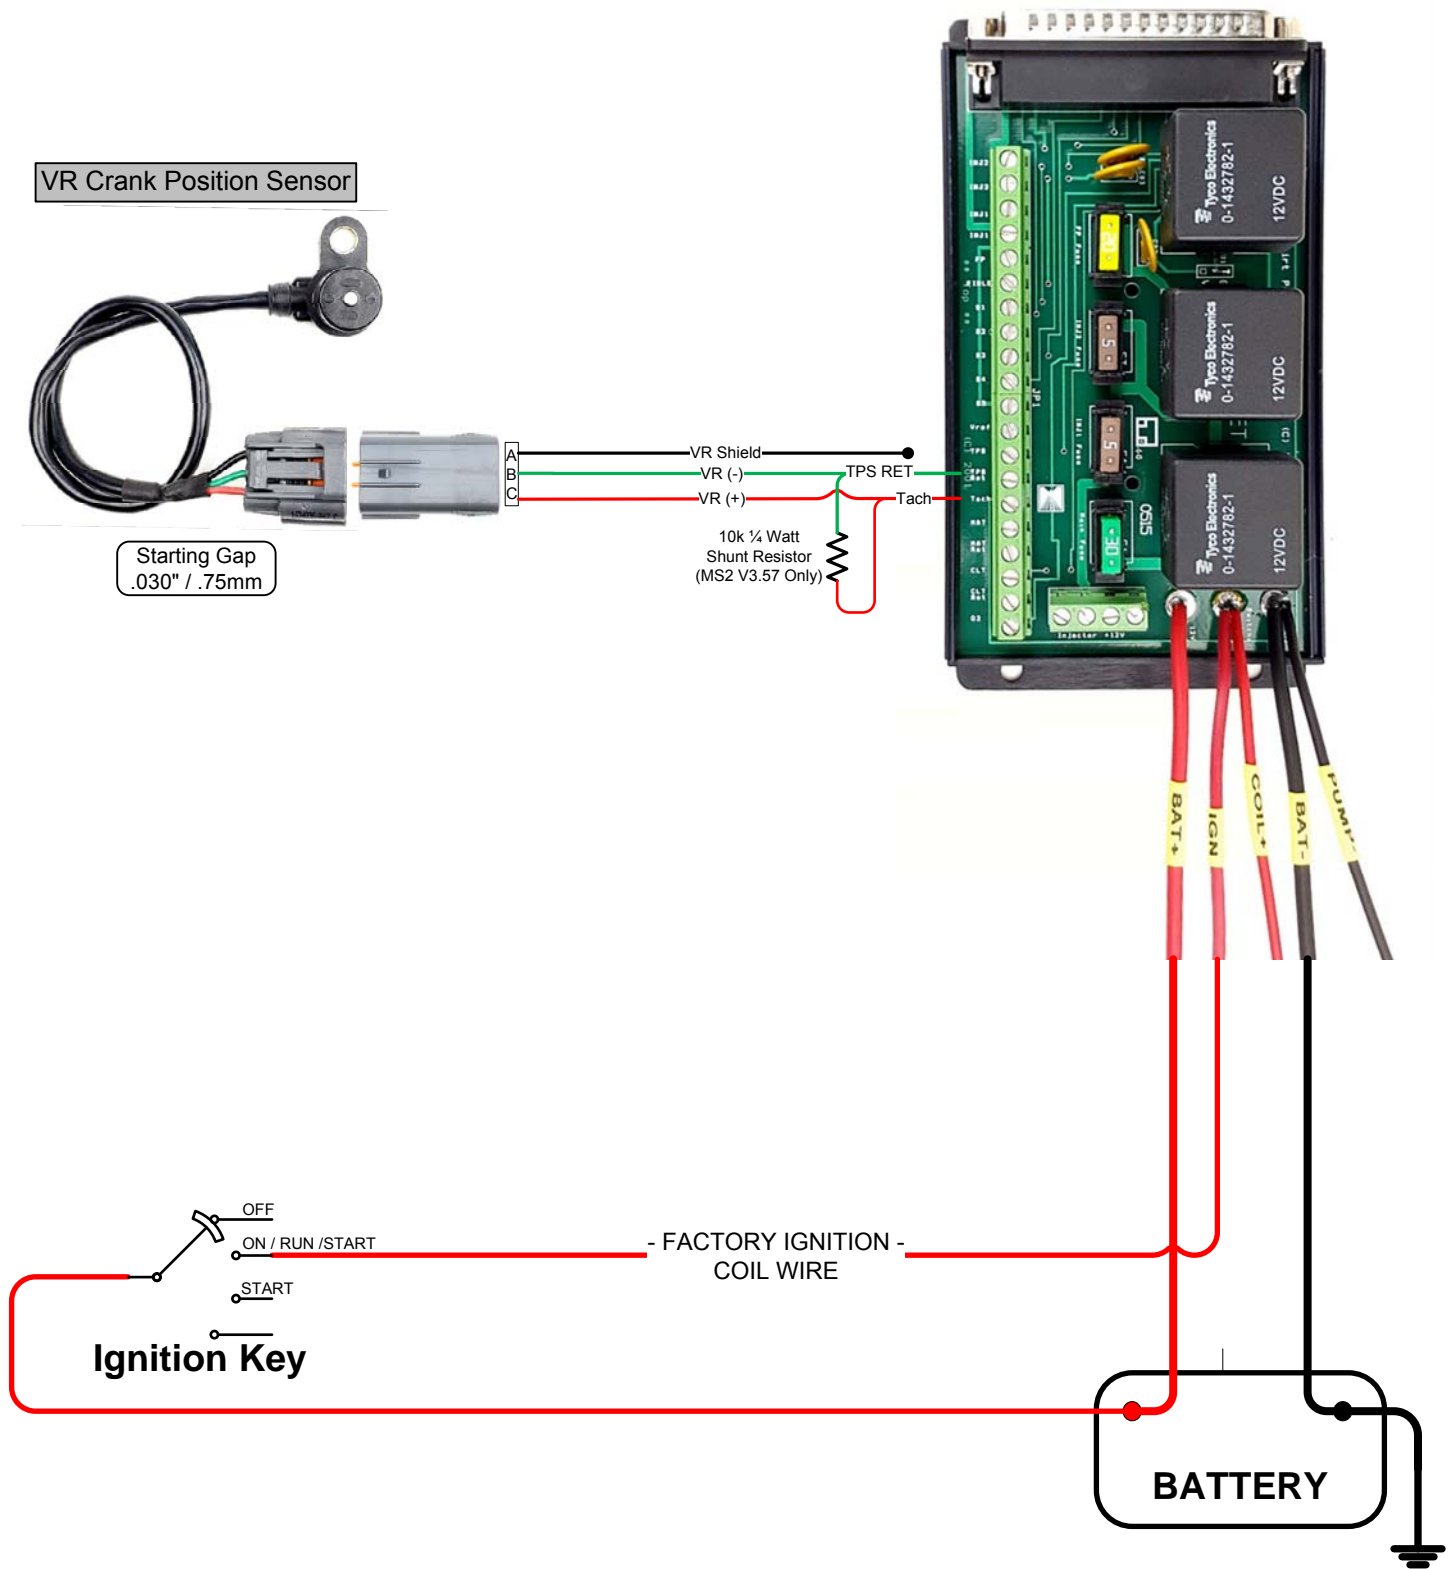

Notes:
Multiple grounds may be places into the sensor return locations. This might be from a crank sensor, additional temp sender or pressure transducer. All the sensor "Ret" locations share a ground plane so if one is nearing capacity you can use another.

*VR Shield can be left disconnected

TITLE		REVISIONS	
MS2 V3.57 Relay Board VR Crank Sensor		NO.	DATE DESCRIPTION
DATE ORIGINAL	SCALE		
10/30/2019	NTS		
LATEST REVISION	JOB NO.	CHECKED	DRAWN
Rev. A			MV

DS
THE DUB SHOP