


# Microsquirt Ignition Coil – LS2 Wasted Spark

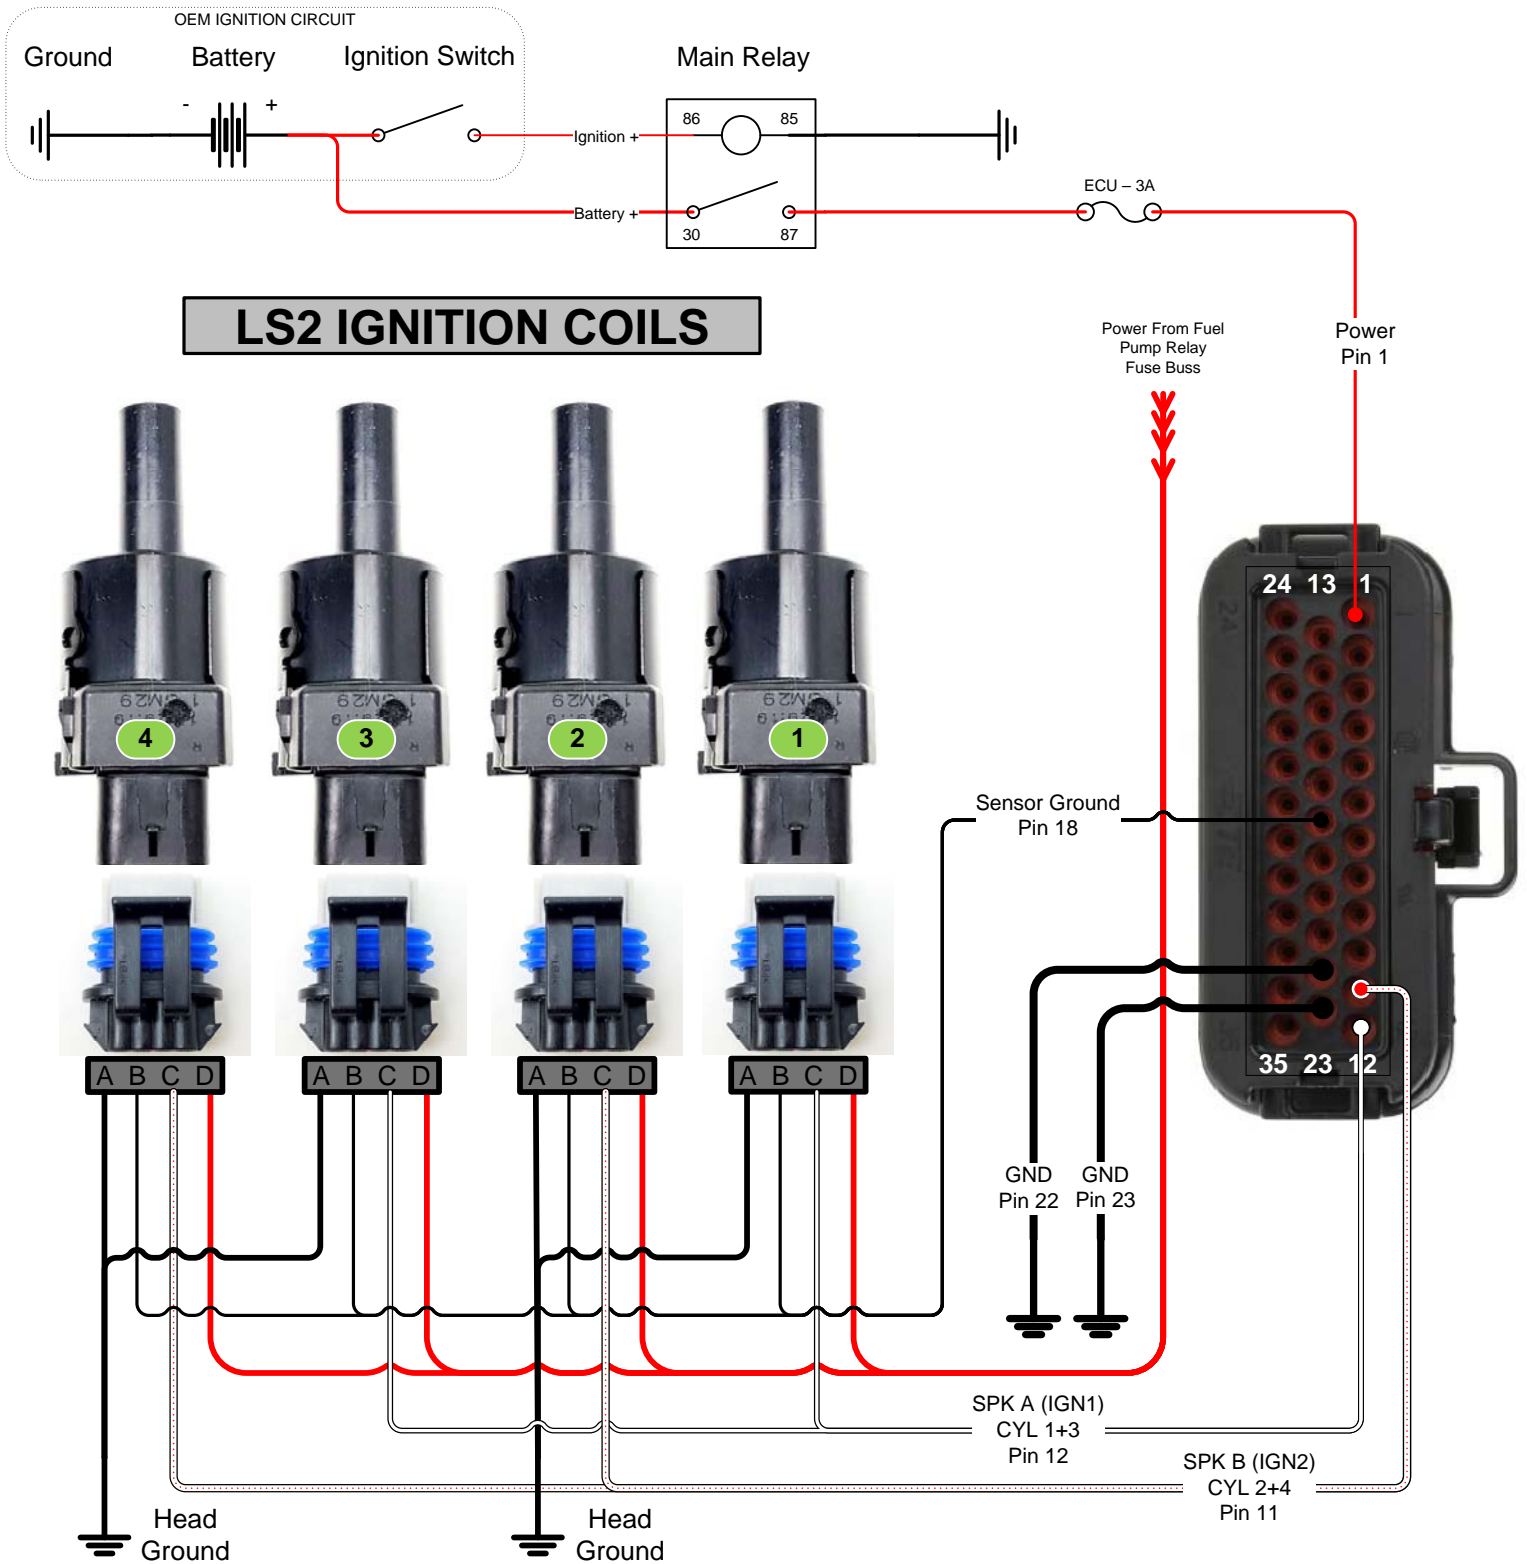

**Notes:**  
 Resistor spark plugs are required to prevent ECU resets.  
 Disregard numbers on coil pack and refer to above diagram. The coil was originally designed for an inline application with different firing order.

|                                   |         |           |                  |
|-----------------------------------|---------|-----------|------------------|
| TITLE                             |         | REVISIONS |                  |
| Microsquirt Ignition Coil IGN-4VW |         | NO.       | DATE DESCRIPTION |
| DATE ORIGINAL                     | SCALE   |           |                  |
| 2/2/2020                          | NTS     |           |                  |
| LATEST REVISION                   | JOB NO. | CHECKED   | DRAWN            |
| Rev. A                            |         |           | MV               |

